

BLUE-PTT-1

Quick Start Komunica Bluetooth Remote PTT

Important Notes

- (A) Please fully charge the remote PTT before pairing. 3 hours of charging is sufficient. Make sure a standard 5V output power source is used to avoid damage to the product. Fast chargers and unknown chargers are prohibited.
- (B) The headset and the remote BLUE-PTT-1 (optional) **must be paired**. Once paired, both **will stay linked**. After that, you will only need to pair the headset with your two-way radio or your phone. There is **no need to pair the remote PTT with your radio**.
- (C) The maximum operating distance between the devices is 10 meters in open space.
- (D) Please do not place the product in high temperature environments.
- (E) Please do not store the product close to fire or under the sun for a long time.
- (F) If it starts smoking, stop using it.
- (G) Do not disassemble the product to avoid damage.
- (H) Please use the USB cable enclosed only to avoid any accidental smoking or fire accidents.

PTT Button Functions


Power on: Press and hold the power button for about 3 second until the blue light is on.

Power off: Power off the connected headset first, press and hold the PTT button of the remote for about 6 seconds until the red light flashes twice and goes off.

PTT control: Press and hold the PTT button on the remote BLUE-PTT-1 to talk, release the PTT button to stop communication.

Enter Pairing mode: With the BLUE-PTT-1 in off position, press and hold the PTT button for about 8 seconds until the blue and red light flashes alternately.

BLUE-PTT-1 (Optional) Remote PTT

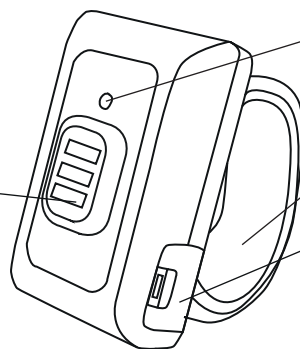

LED Indicator: Check the different LED modes indicator at the end of the document or in our accessory manual.

Adjustable Strap

USB-C Charging Port



For more information
Download Manual

LED Indicator type	Indicated State
LED indicator off	Power Off
Blue light stays for 1 second and flashes twice	Power On
Blue light flashes once quickly every 6 seconds	Not Connected
Blue and red light flash quickly alternately	Pairing mode
Blue light flashes once slowly every 6 seconds	Connected
Red light flashes once every 0.5 seconds	Battery charging
Red light stays all the time	Battery charging completed
Red light flashes twice quickly every 40 seconds	Low battery level
Blue light stays all the time	PTT button pressed to talk